


XL Go™

Quick Start Guide



Charging the Battery

Press the battery symbol  on the battery to check the charge level.


Plug AC to DC transformer into suitable AC power supply and connect DC output connector into XL Go battery. The battery's LED lights will illuminate according to the amount of charge attained. The battery may also be charged while disconnected from the system. When fully charged, LED lights on battery will turn off.

System Removal

Carefully remove insertion tube from internal storage reel and lift handset from storage case.

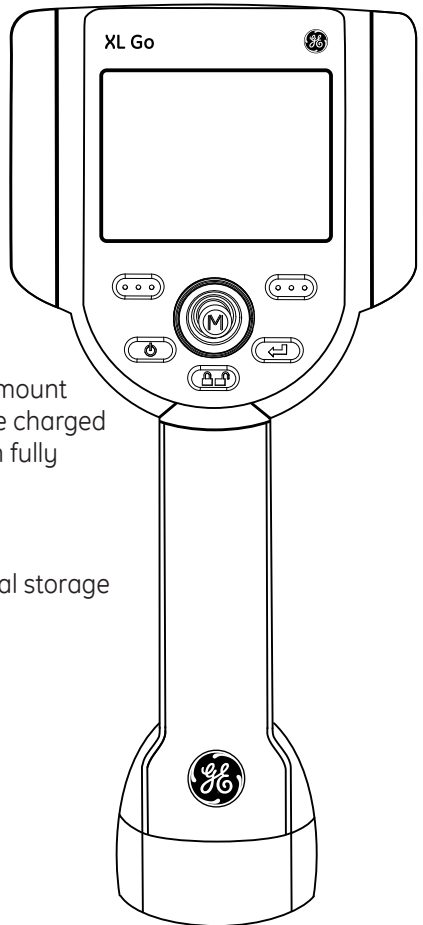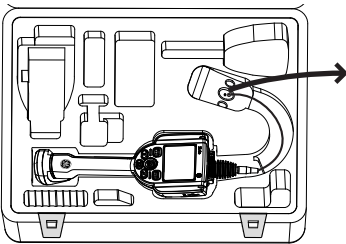


System Power On

Momentarily press and release  Power/Exit. Buttons and LCD will light up and begin power-up sequence. After a brief period, the system screen will display live video and screen prompts. The system is now ready for use.








Controls


Left Soft Key : Activates screen command listed on system LCD. This key will primarily be used to go BACK one screen.

Power/Exit : Turns system power on/off. Also used to exit menus, return to live/frozen video and disable image control features.



Joystick: Controls All-Way articulation. Press to activate Live Main Menu, Recalled Image Menu, and Freeze Frame Menu. Push joystick left/right/up/down to navigate menus and sub-menus.

Steering Control : Press and release to keep bending neck locked in place after joystick is released. A  lock will appear on LCD when enabled. Press and release again to unlock steering control. The  lock will disappear from LCD when disabled. Press and hold to engage HOME function to straighten bending neck.  symbol will appear during HOME function.

Freeze/Enter : Freezes image on-screen. Also acts as enter key for selecting options.

Right Soft Key : Activates screen command listed on system LCD. This key will primarily be used to SELECT active menu choices.


Still Images

To capture still image, compose picture, and press and release FREEZE FRAME button. Press  right soft key with SAVE on LCD above to save to default location. Alternately, from live video, press and hold  Freeze/Enter to auto-save.

Video

To record live video, press and hold  left soft key labeled RECORD on LCD above. A red record symbol will appear in the upper right hand corner. When the video is stopped, it will automatically save to the default location.

System Power Off

Press and hold  Power/Exit key until "SYSTEM SHUTTING DOWN" message appears. Key illumination and LED probe lights will go out when system is completely powered down.

System Storage

Place tip of insertion tube into orange funnel and carefully feed into storage reel. Place XL Go handset into designated foam cutout. LCD screen should face up.

